Fiber

CHAPTERS

Fiber Patch Cables

Bare Fiber

Optomechanics

Components

Measurement

Fiber

Fiber

SM Fiber Launch System with Auto-Alignment Controller (Page 1 of 2)

10

18

Fiber Launch System with NanoTrakTM, Controller, 3-Axis Flexure Stage, and Accessories (Microscope Objective Not Included)

For current pricing, please see our website.

SECTIONS

Test and

FiberBench

FiberPorts

Fiber Launch Platforms

Fiber Adapters




Introduction

The MAX373DK1 is an automated fiber launch system that reduces the time it takes to optimize the coupling of light into a bare single mode fiber. This package includes a nanopositioning 3-axis flexure stage with a NanoTrak™ controller that optimizes the position of the fiber perpendicular to the optical axis using the internal piezo actuators in the stage. Also included are three stage accessories: an RMS-threaded optical mount (HCS013), a bare fiber clamp (HFF001), and a cable strain relief clamp (HFS001). Other accessories can be purchased separately (see pages 572 - 588) in order to expand the system's capabilities for use with other optical elements like waveguides or connectorized fibers.

NanoTrak[™] Controller

When activated, the NanoTrakTM controller (see schematic below) generates drive voltages for two piezo actuators based on the optical (electrical) feedback signal. In the MAX373D kit, the piezo actuators will control the position of the fiber along the two axes perpendicular to the optical axis, and the feedback signal will be proportional to how much light is coupled into the optical fiber. By letting the NanoTrakTM controller position the fiber tip on the optical axis, optimizing the coupling simply requires the user to manually align the fiber along the optical axis. After the coupling of light into the fiber has been optimized, the tracking mode can be turned off without affecting the coupling, or the tracking mode can be left on in order to ensure that the coupling remains optimized even if external effects, like changes in temperature, cause small changes in the beam position. See pages 657 - 659 for information on how the Auto Alignment Circuit in the NanoTrak[™] controller functions.

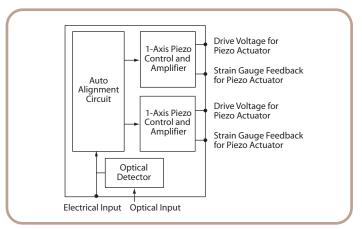

10% Discount for Complete Package

Features

- 3-Axis Flexure Stage
 - Manual Differential Adjusters
 - Internal Piezo Actuators with Strain Gauge Sensors
- NanoTrakTM Auto-Alignment Controller • Integrated InGaAs Detector
 - Replacement Si Detector Available (NTA009)
 - Two Inputs for Strain Gauge Feedback
 - Two Outputs to Drive Piezo Actuators
 - Advanced Alignment Optimization Algorithms
 - USB Interface

10 Minute Alignment Procedure

By using Thorlabs' MAX311D (see page 547) flexure stage as the base for this fiber launch system, first light detection, even with single mode fiber, is straightforward. Before starting this procedure use two steering mirrors to steer the beam so that it is roughly propagating 12.5 mm above the channel on the empty stage, which is locked down on an optical table. Also have the NanoTrak™ controller connected to the stage and to a computer with the software loaded and operational.

- · Mount your coupling optic on the provided RMS threaded mount (HCS013) and place the mount in the channel on the fixed large angle bracket (AMA009) attached to the stage
- · Adjust the stage using the manual differential adjusters so that the HCS013 can be slid easily from the AMA009 to the stage platform (keep the HCS013 tight against one side of the channel)
- Steer your free-space beam so that the beam position does not wander as the coupling optic is slid from the large angle bracket to the stage platform.
- While keeping the mount pressed against one side of the channel, lock down the HCS013 on the AMA009 such that the light is focused at a point near the edge but still over the adjustable platform on the stage.
- . Lock down the fiber clamp and the strain relief cable on the stage platform so that the tip of the fiber will be further away from the coupling optic than the point at which the light is focused. (Make sure the stage platform can be translated forward far enough to move the fiber tip through the focal point.)
- . Load the fiber, and if the other end of the fiber has an FC connector attach it to the NanoTrak™ detector. Otherwise, use a suitable detector to measure the light coupled into the fiber and use the electrical input on the NanoTrak[™] controller to provide the feedback it requires.
- . Use the manual actuator to move the fiber tip toward or away from the lens until first light is detected.
- Coarsely maximize the signal using all three manual adjusters.
- Activate the NanoTrak[™]. It will immediately maximize the position of the fiber tip perpendicular to the beam propagation direction.
- . Use the manual actuator to move the fiber tip toward or away from the lens while watching the power monitor. If the piezo actuators near the limit of their range use one of the other manual actuators to put them back toward the middle
- · Stop once the coupled power has been maximized.

SM Fiber Launch System with Auto-Alignment Controller (Page 2 of 2)



NanoTrakTM Controller Specifications

Optical Power Measurement

- PIN Photodiode: FC/PC Fiber Input
- InGaAs Detector: 1 nA to 10 mA Photocurrent
- Optional Replacement Si Detector Available (NTA009) (Intended for use in the visible region of the spectrum)
- Optical Power Monitor (BNC): Multiple Ranges
- Signal Phase Compensation: -180° to 180°

Principle NanoTrak Parameters

- Circle Scanning Frequency: 1-300 Hz
- Circle Diameter Adjustment Modes: Automatic and Manual

Piezoelectric Input/Output

- Two Output Connectors (SMC Male):
- Voltage Output: 0-75 VDC/Channel
- Voltage Stability: 100 ppm Over 24 Hours
- Noise: <3 mVrms
- Output Current: 500 mA/Channel
- Output Monitors (BNC): 0-10 VDC
- Analog Inputs (BNC): 0-10 VDC
- (Used in Piezo Amp Mode) • Strain Gauge Position Feedback:
- (Two 9-Pin D-Type Female)

Flexure Stage Specifications

- **Manual Travel:** 0.16" (4 mm)
- **Thermal Stability:** 1 μm/°C
- Differential Adjusters
 - Coarse Adjustment: 0.5 mm/rev
 - Fine Adjustment: 50 µm/rev
- **Piezoelectric Travel:** 20 μm
- Manual Drive Resolution: Provides 50 nm Resolution Over a 300 µm Travel Range
- Piezoelectric Actuator Resolution: 5 nm When Operating with Internal Piezo Displacement Sensors.
- Max Piezoelectric Drive Voltage: 75 VDC
- **Crosstalk:** 20 µm/mm of Travel (Max)

The aptTM NanoTrakTM controller is supplied with a full suite of software support tools. Once the software and associated USB drivers are installed, the aptUser utility provides a full featured intuitive graphical instrument panel allowing full control and visualization of the NanoTrakTM operation. Additionally, ActiveX[®] components are included to speed user developed routines in the user's programming environment of choice (e.g., LabVIEWTM, Visual Basic, or C++).

- Other Input/Output
 - Optical Power Monitor (BNC): 0-10 VDC
 - User Control (37-Pin D-Type Female) – Isolated Digital I/O
 - Trigger In/Out (BNC): 0-10 VDC
 - USB Port

Power Requirements

- Voltage: 85-264 VAC
- Frequency: 47-63 Hz
- Power: 200 W
- Fuse: 3 A
- General
 - Dimensions (W x D x H):
 - 245 mm x 330 mm x 130 mm (9.65" x 13" x 5.12") • Weight: 6 kg (13 lbs)

See page 648 for a complete presentation of the NanoTrak controller used in the MAX373DK1 kit.

- Resonant Frequency (±10%): 375 Hz (No Load), 200 Hz (275 g Load), 150 Hz (575 g Load)
- Load Capacity: 2.2 lbs (1 kg)
- Deck Height: 62.5 mm from the Base of the Stage to the Mounting Surfaces of the Moving Platform, the Accessory Beam Height is 75 mm from the Bottom Surface of the Stage
- Accessories: Mounted on the Top Deck of the Stage:
 Large Fixed Bracket (AMA009)
 - Microscope Objective Mount (HCS013)
 - Adjustable Force Fiber Clamp (HFF001)
 - Cable Strain Relief (HFS001)

See page 547 for a complete presentation of the MAX311D flexure stage used in the MAX373DK1 kit.

ITEM #	METRIC ITEM #	\$	£	€	RMB	DESCRIPTION
MAX373DK1	MAX373DK1/M	\$ 9,172.90	£ 6,604.49	€ 7.980,42	¥ 73,108.01	apt TM NanoTrak TM Fiber Launch System with InGaAs Detector
NTA009	-	\$ 295.00	£ 212.40	€ 256,65	¥ 2,351.15	apt™ NanoTrak™ Visible Light Detector Head

NTA009

CHAPTERS Fiber Patch

Cables Bare Fiber Fiber

Fiber Components

Test and Measurement

Optomechanics

SECTIONS 💙

FiberBench

FiberPorts

Fiber Launch Platforms

Fiber Adapters