



M3-0.20 mm Extremely Fine Hex Adjusters

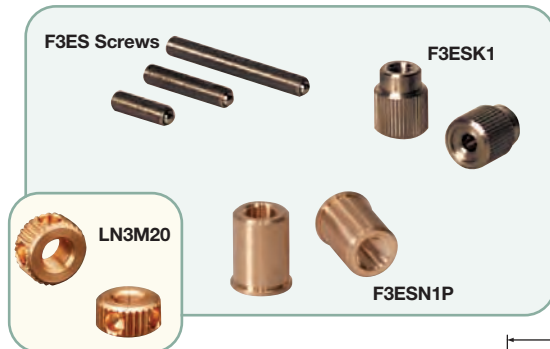

Fabricated from 303 series stainless steel, the M3-0.20 mm Hex Adjusters feature extremely fine (0.20 mm per revolution) threads that preclude the use of taps to produce threaded mating parts. Instead, use the F3ESN1P threaded bushing, which is manufactured on a precision CNC turning center using a single point threading tool. For custom bushings, please contact tech support. Also available is a removable knob and a vacuum-compatible (10^{-6} Torr) lock nut.

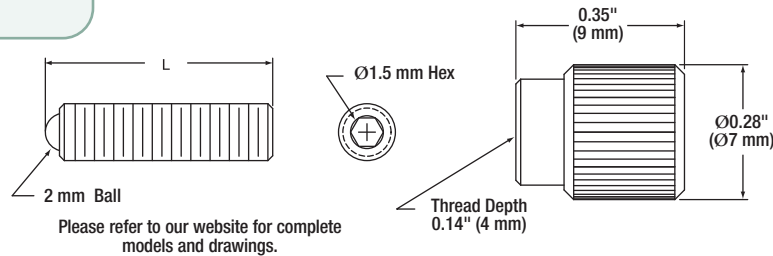


ITEM #	\$	£	€	RMB	DESCRIPTION	LENGTH (L)	MATERIAL
F3ES8	\$ 9.40	£ 6.77	€ 8.18	¥ 74.92	M3-0.20 mm Adjuster Screw	8 mm	303 Stainless Steel
F3ES10	\$ 9.75	£ 7.02	€ 8.48	¥ 77.71	M3-0.20 mm Adjuster Screw	10 mm	303 Stainless Steel
F3ES12	\$ 10.20	£ 7.34	€ 8.87	¥ 81.29	M3-0.20 mm Adjuster Screw	12 mm	303 Stainless Steel
F3ES15	\$ 10.80	£ 7.78	€ 9.40	¥ 86.08	M3-0.20 mm Adjuster Screw	15 mm	303 Stainless Steel
F3ES20	\$ 15.00	£ 10.80	€ 13.05	¥ 119.55	M3-0.20 mm Adjuster Screw	20 mm	303 Stainless Steel
F3ES25	\$ 19.00	£ 13.68	€ 16.53	¥ 151.43	M3-0.20 mm Adjuster Screw	25 mm	303 Stainless Steel
F3ESN1P	\$ 7.60	£ 5.47	€ 6.61	¥ 60.57	M3-0.20 mm Threaded Bushing	7 mm	Phosphor Bronze
F3ESK1	\$ 8.50	£ 6.12	€ 7.40	¥ 67.75	M3-0.20 mm Removable Adjuster Knob	9 mm	303 Stainless Steel
LN3M20	\$ 8.20	£ 5.90	€ 7.13	¥ 65.35	M3-0.20 mm Lock Nut	3.2 mm	Phosphor Bronze

NEW

M3-0.25 mm Fine Hex Adjusters



M3-0.5 mm hex adjusters are ideal for limited-space applications that require fine (0.25 mm/rev) resolution. The 125 μ m thread depth, while shallow, does allow the use of a tap (Item # 99946 on page 590) to make mating parts. Alternatively, a F3SSN1P threaded bushing can be used. Also available for use with the M3-0.25 mm adjusters is a removable knob and a vacuum-compatible (10^{-6} Torr) lock nut.

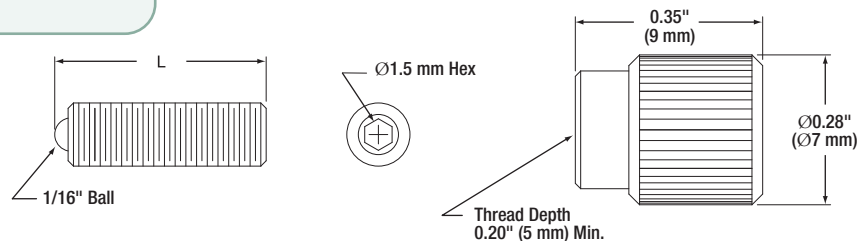

ITEM #	\$	£	€	RMB	DESCRIPTION	LENGTH (L)	MATERIAL
F3SS8	\$ 8.20	£ 5.90	€ 7.13	¥ 65.35	M3-0.25 mm Adjuster Screw	8 mm	303 Stainless Steel
F3SS10	\$ 9.60	£ 6.91	€ 8.35	¥ 76.51	M3-0.25 mm Adjuster Screw	10 mm	303 Stainless Steel
F3SS12	\$ 9.80	£ 7.06	€ 8.53	¥ 78.11	M3-0.25 mm Adjuster Screw	12 mm	303 Stainless Steel
F3SS15	\$ 10.20	£ 7.34	€ 8.87	¥ 81.29	M3-0.25 mm Adjuster Screw	15 mm	303 Stainless Steel
F3SS20	\$ 14.00	£ 10.08	€ 12.18	¥ 111.58	M3-0.25 mm Adjuster Screw	20 mm	303 Stainless Steel
F3SS25	\$ 18.50	£ 13.32	€ 16.10	¥ 147.45	M3-0.25 mm Adjuster Screw	25 mm	303 Stainless Steel
F3SSN1P	\$ 7.60	£ 5.47	€ 6.61	¥ 60.57	M3-0.25 mm Threaded Bushing	7 mm	Phosphor Bronze
F3SSK1	\$ 8.50	£ 6.12	€ 7.40	¥ 67.75	M3-0.25 mm Removable Adjuster Knob	9 mm	303 Stainless Steel
LN3M25	\$ 8.20	£ 5.90	€ 7.13	¥ 65.35	M3-0.25 mm Lock Nut	3.2 mm	Phosphor Bronze

NEW