



Date	9/25/2019	Production Order Number	TP02110431
Serial Number	SN: 00106	Assembled By	MM
Range Tested	25mm	Technician	CS

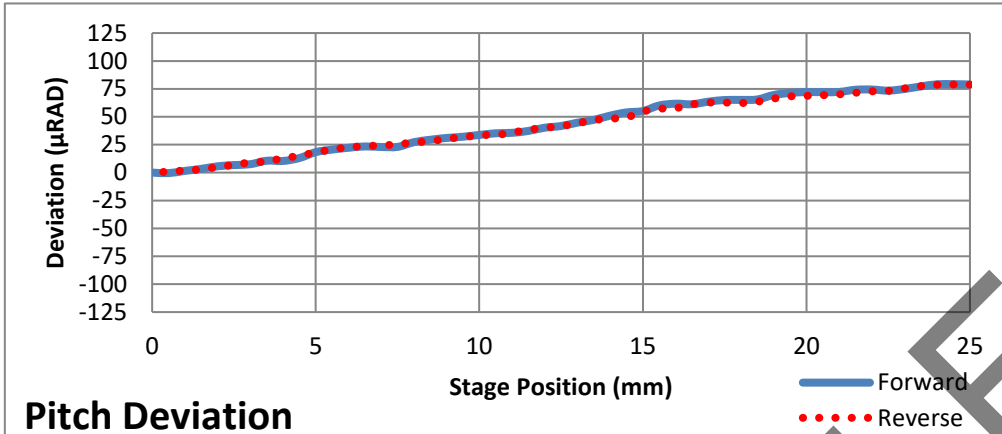


Pitch Deviation ^a (µRad)	
Min	-0.50
Max	79.20
Range	79.70

^a 25 mm Test Range

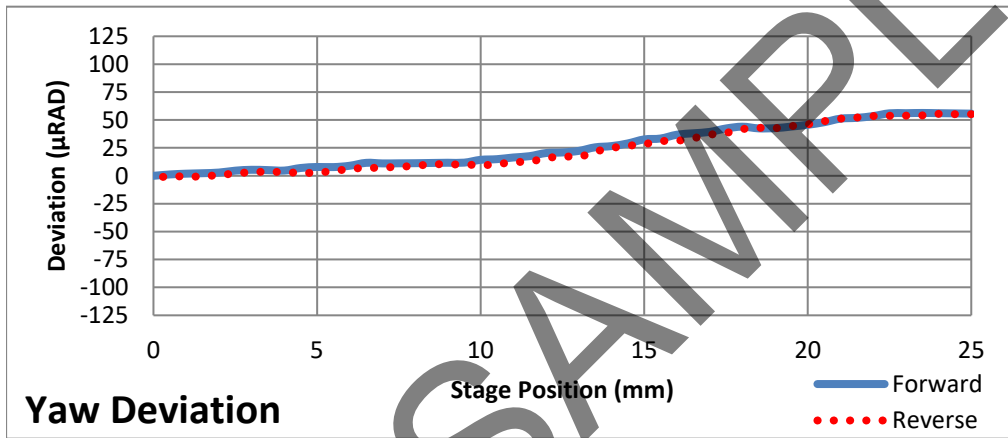

Yaw Deviation ^a (µRad)	
Min	-1.20
Max	56.30
Range	57.50

^a 25 mm Test Range

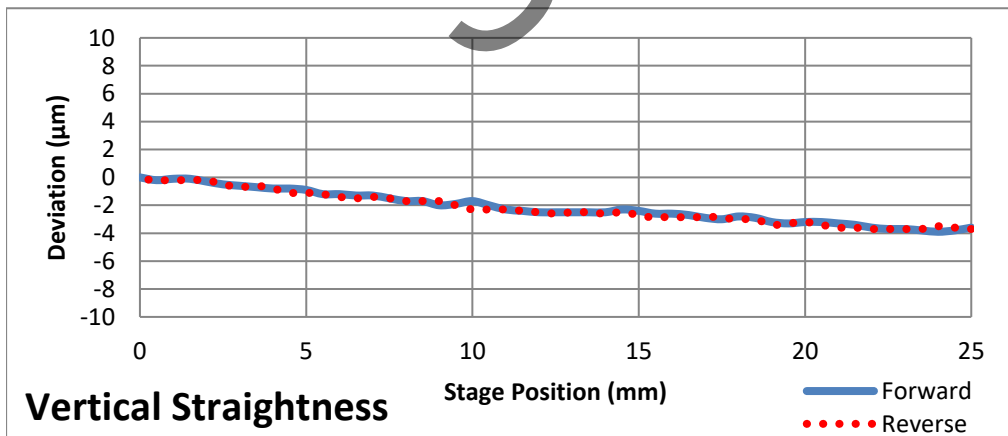

Vertical Straightness ^a (µm)	
Min	-3.90
Max	0.00
Range	3.90

^a 25 mm Test Range

